



Safety instructions and assembly
instructions for garden tables
81.5 cm and 102 cm wide.

Garden furniture
Garden table
140 | 160 cm

As of:
May 2025



Table of contents

Explanation of symbols	10
General	10
Scope of delivery	11
Safety instructions	11
Cleaning instructions	12
Disposal instructions	12
Assembly instructions	14

Explanation of symbols

The instructions use symbols, signal words and notes to warn of hazards and ensure safe operation. The symbols are shown and explained below.



WARNING

This symbol indicates dangers that could result in accidents or damage. Before carrying out the corresponding assembly step, read the corresponding note next to the symbol.



NOTE

This symbol provides important information and/or indicates problems during the assembly process. Observe these before carrying out the corresponding assembly step in order to understand and avoid problems.

General

The assembly instructions refer to the megawood® garden table.

They contain important information on assembly and use. Read the assembly instructions carefully, especially the safety instructions, before setting up, assembling and using the product, and keep them in a safe place. The instructions, prohibitions and regulations in these assembly instructions must be followed at all times and all safety instructions must be observed.

Only use the item as described in these instructions to prevent accidental injury or damage. Do not carry out any improper modifications or repairs. If you pass the product on to third parties, these assembly instructions must also be handed over.





Intended use




The product is designed as a garden table for outdoor use. Only use the garden table as described in these assembly instructions. Any other use is considered improper and may result in damage to property or personal injury. The manufacturer accepts no liability for damage caused by improper or incorrect use.

Misuse

The user is solely responsible for damage resulting from improper use and failure to observe the warning and safety instructions. The manufacturer accepts no liability for damage caused by improper use.

Scope of delivery

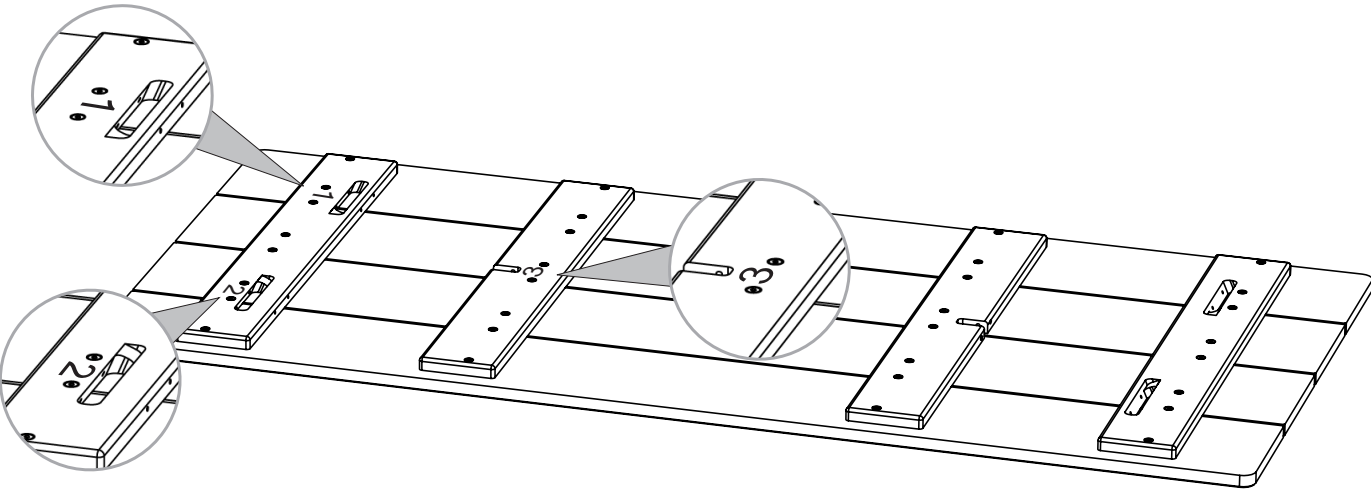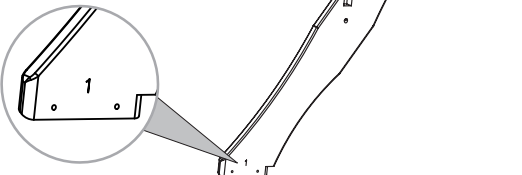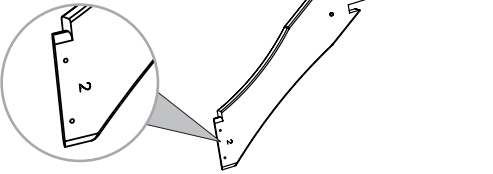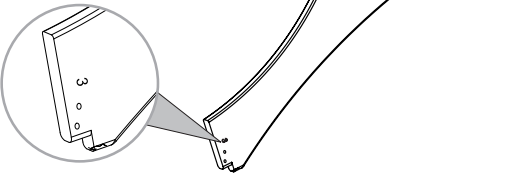Amount	Product description	Pictures
1	A	
2	B	
2	C	
2	D	

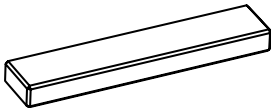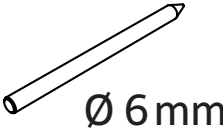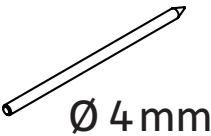1	E	
2	F	
12	G	



Risk of injury due to incomplete or damaged parts

Immediately after unpacking, check the scope of delivery for completeness and the perfect condition of the product and all parts. Do not set up the product if the scope of delivery is incomplete.

Safety instructions



General information on assembly, installation and use

Ensure that all parts are undamaged and assembled correctly. Improper assembly may result in injury. Damaged parts may affect safety and function.

Do not make any changes to the product.

Check the fastenings at regular intervals to ensure that they are secure.



Installation location

Ensure that there is sufficient space for assembling and setting up the garden table. The product stores heat and can become uncomfortably warm in direct sunlight.

Assemble the garden table on a level, clean and non-slip surface. Store the dismantled garden table and accessories in a well-ventilated, dry place that is protected from the weather.



Fire hazard

The product is made of flammable materials. Do not use the garden table near sources of heat or open flames. Do not use a barbecue or patio heater in the immediate vicinity of or on the garden table and do not place any other hot objects on it.



Risk of injury due to improper use

Only use the garden table as a seat, not for climbing or as a ladder. Observe the maximum load capacity in accordance with DIN EN 581-2:2015.

Place the garden table on a stable and level surface. Do not use the table if it is visibly damaged.

Lift and carry the table by the seat with at least two people. If a table leg comes loose, the safety pins are not fitted correctly. These must be reinserted.

Do not allow children to play on or around the garden table unsupervised.

Cleaning instructions



Cleaning instructions

Do not use aggressive cleaning agents or high-pressure cleaners for cleaning. Please observe our cleaning recommendations in the garden furniture pass.

Further information, instructions for use and videos with cleaning tips are available at: www.megawood.com/en/material/care-instructions

Disposal instructions



Disposal instructions

„Today's product is tomorrow's raw material.“

GCC is a valuable raw material that we use to manufacture new products. Therefore, at the end of its service life, please return the product to our recycling plant at one of our return dealers (www.megawood.com/dealers) or register your item at www.megawood.com/c2c for recycling.

This will help you avoid waste, CO₂ emissions and conserve natural resources!

Our packaging materials are recyclable and therefore valuable raw materials. Packaging that is no longer required should therefore be separated and disposed of properly at your local waste disposal facility.

Assembly instructions





Assembly





Wear safety shoes, protective gloves and safety goggles during assembly and installation.

Caution: The strapping bands are under tension, so open the packaging carefully. The product parts may be damaged if you use a knife or other sharp, pointed object.


Proceed carefully when assembling the item and follow the assembly instructions. Carelessness can result in crushed fingers.

Do not allow children to play with the components and packaging material without supervision. They could injure themselves or swallow small parts.

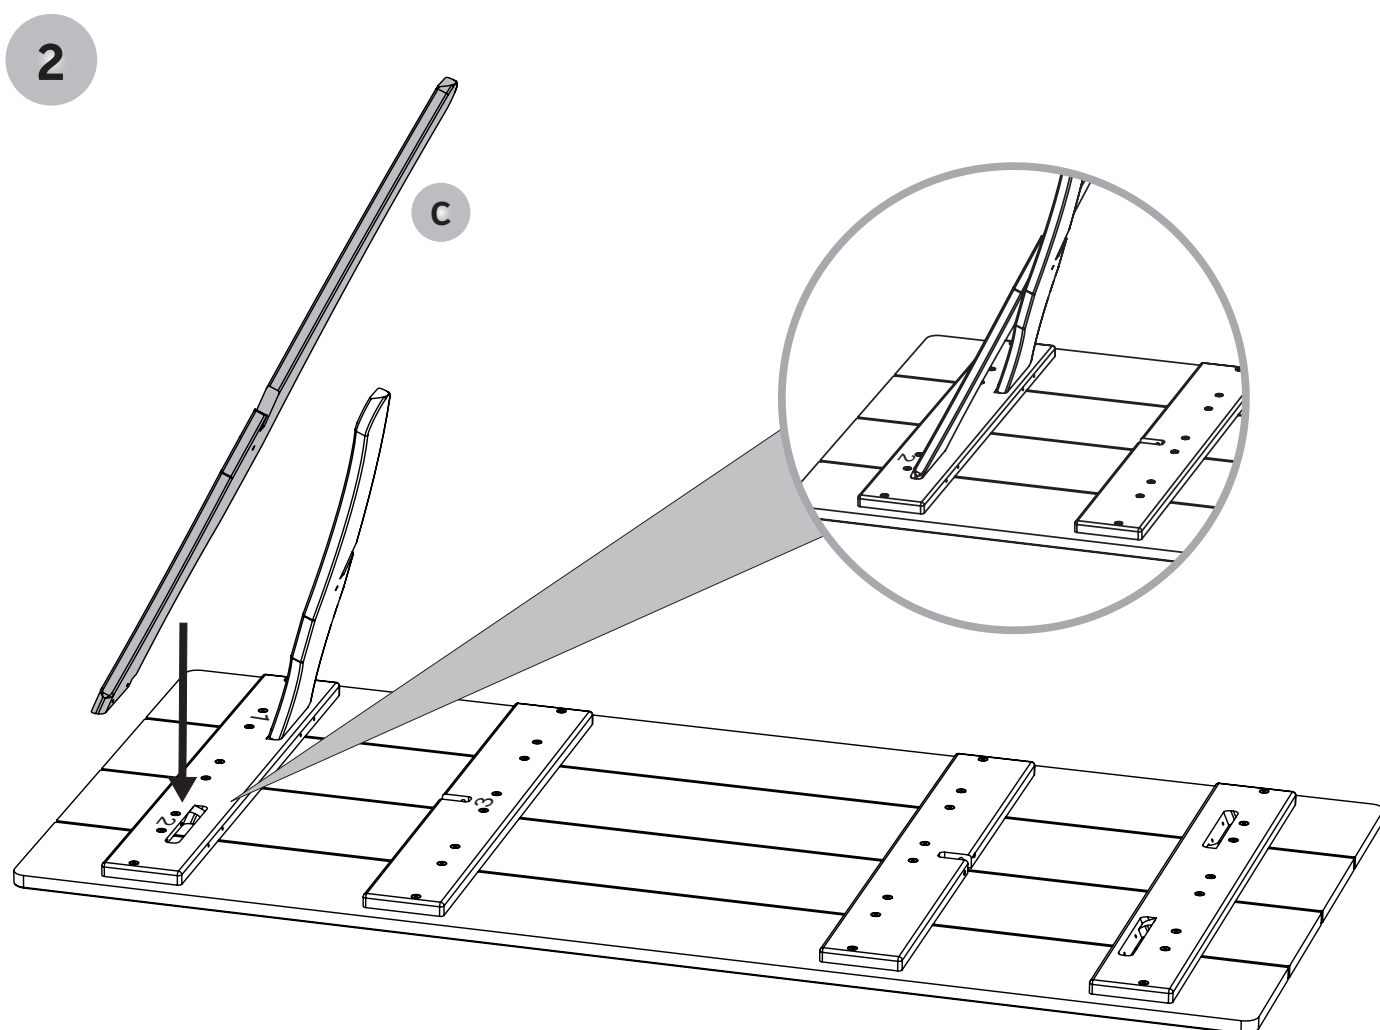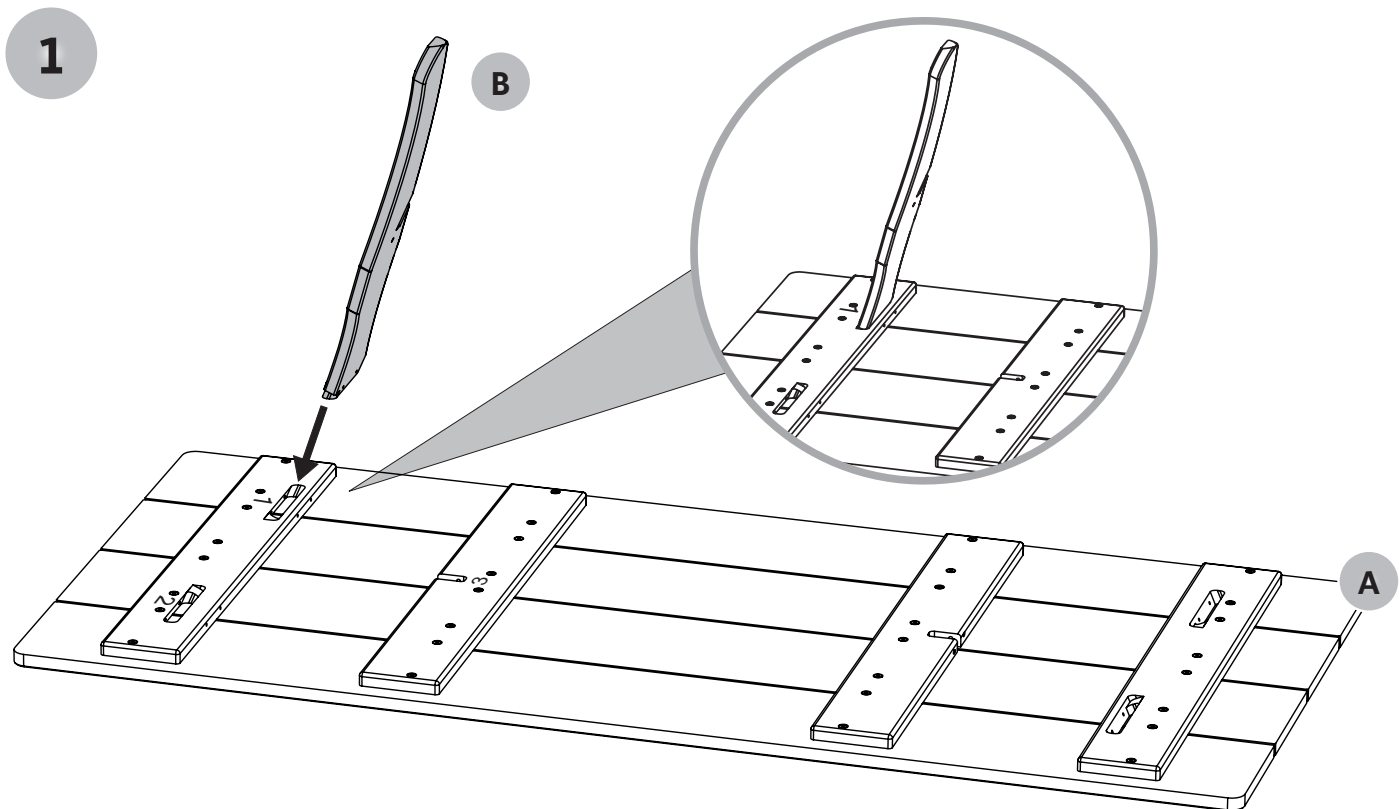

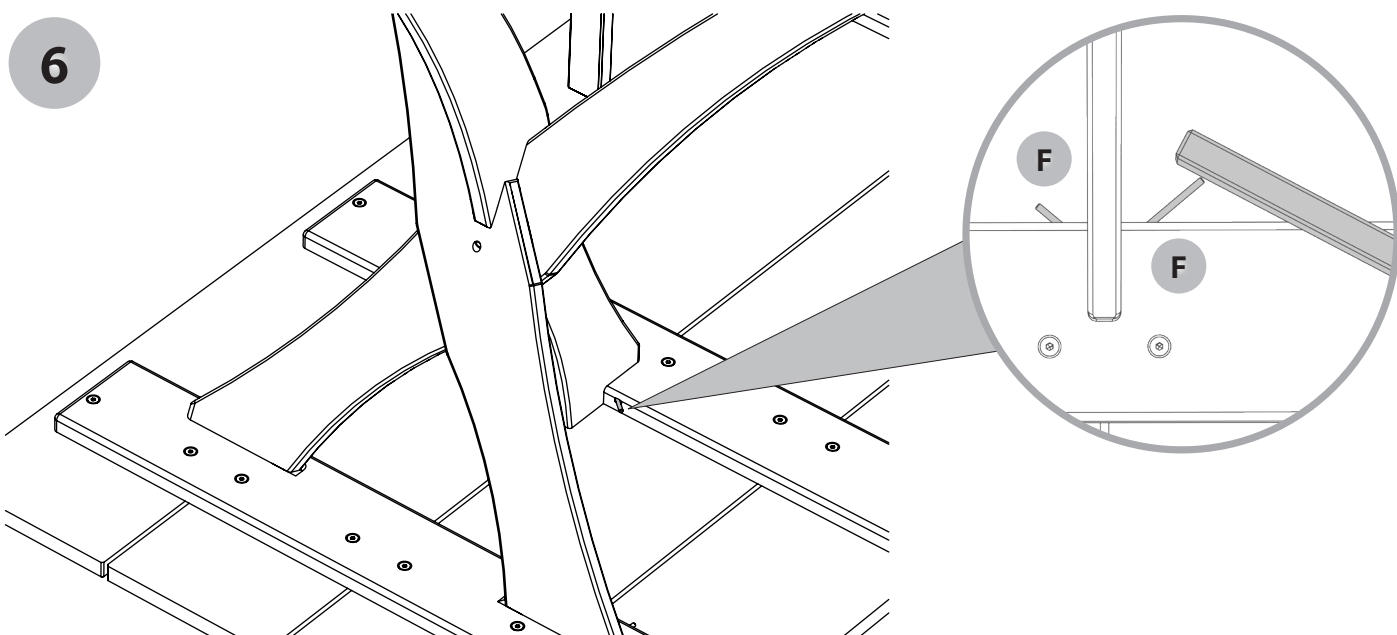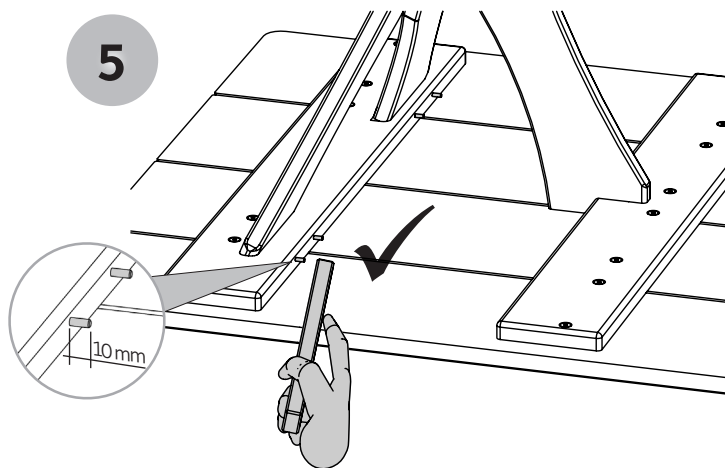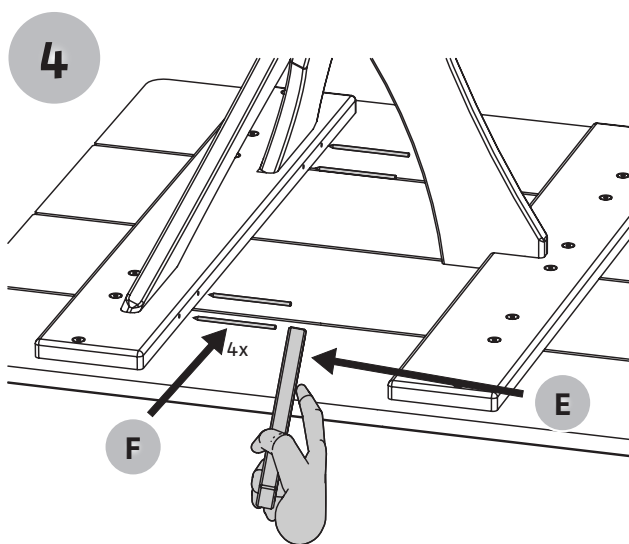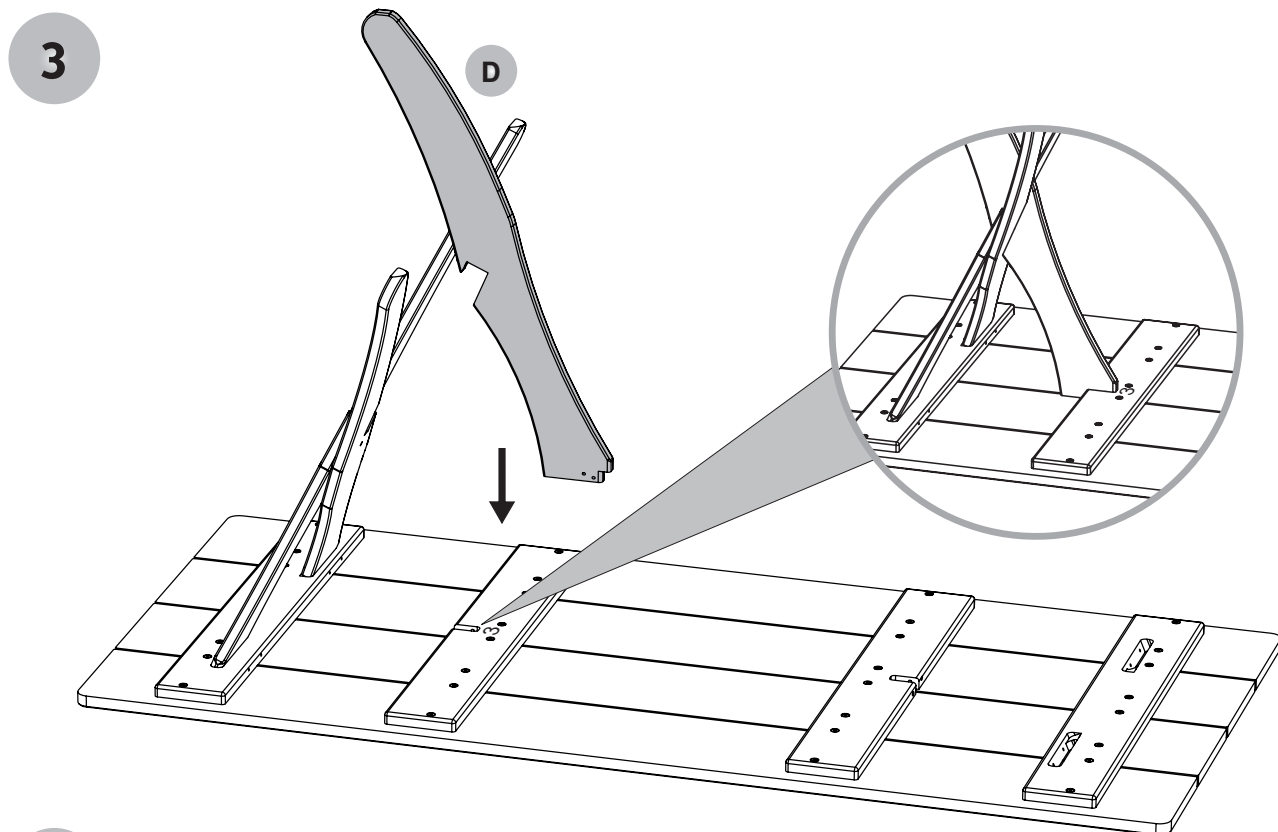

7

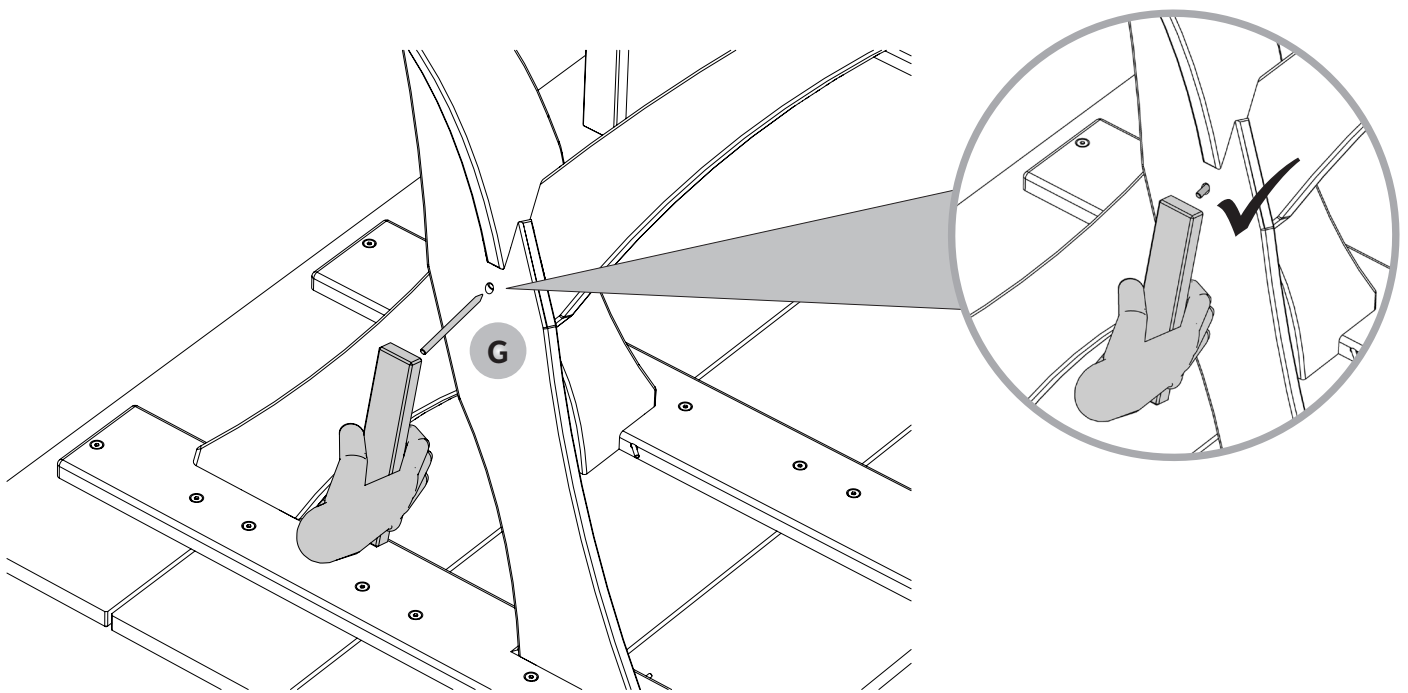

8

