
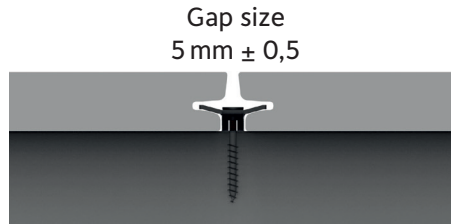
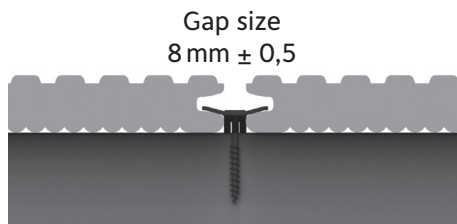


For a fast and easier installation, we recommend the use of the locking clamps on a GCC substructure. This means that a permanent pre-drilling and screwing of the clips is no longer necessary.


We do not provide a warranty for terrace constructions with construction beams that are not made of GCC.

Assembly instructions


Clip for open gaps
stainless steel & standard steel

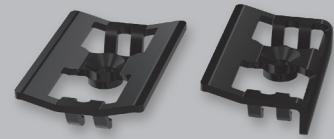



! In salty environments, use the **stainless steel clip**.

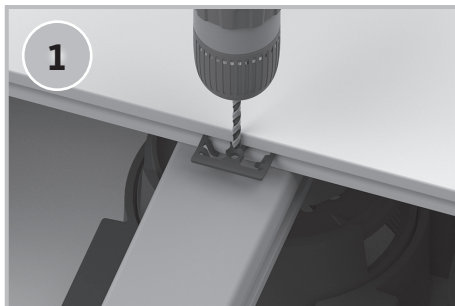

Position the clip with the stop and predrill with a 3 mm bit.

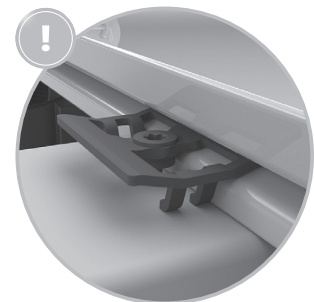


do not tighten the screw.

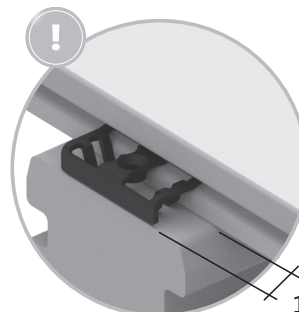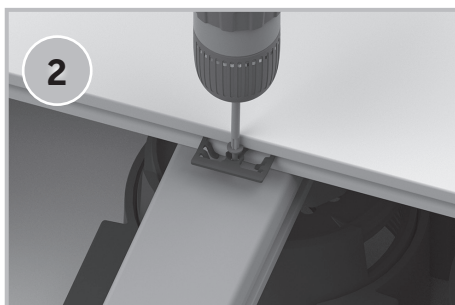


set the edge clip flush with the construction beam.

Fix the clip in place with the screw.

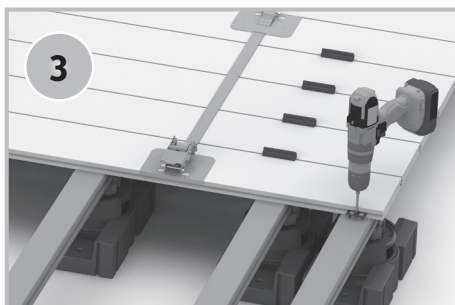

Please use the special bit enclosed.

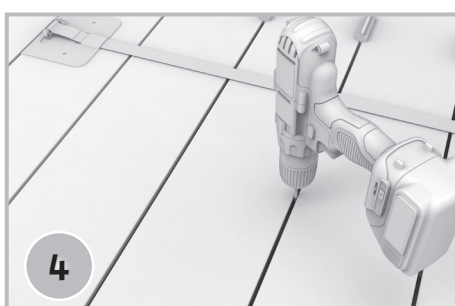

After 5-6 boards, tighten the clips using the screw and apply an average torque.